

Floodline Plug and Play Auto-Connect



The Floodline Plug and Play Auto-Connect System allows instant, foolproof connection for quick, no-hassle installation by any trained engineer or contractor.

The system provides speedy connection for all types of leak detection cable and sensors with any Anadel Floodline Control Panel.

The Floodline Plug and Play Auto-Connect uses a specially adapted version of the industry standard RJ (Registered Jack) type network connector with universal acceptance. The robust plug and socket system provides quick, easy and successful connection every time. The system also allows easy maintenance, replacement and modification.

Couplers:

In/out couplers perform all connection and zone change functions. No set up or links to change. No wire stripping. No confusion.

SOL – Start of Line

Connects leader cable to detection cable.

Auto-coupler

Connects one detection cable zone to another. In-built system logic automatically sets its relative position and zone address.

EOL – End of line


Terminates last zone in line.

Cables:

Detection cable and patch-leader cable is available in a range of standard pre-terminated lengths. Other non-standard lengths can be supplied at no extra cost.

All cables can also be cut and connected on site by a trained engineer or contractor.

Standard lengths: 5m, 7.5m, 10m, 15m.

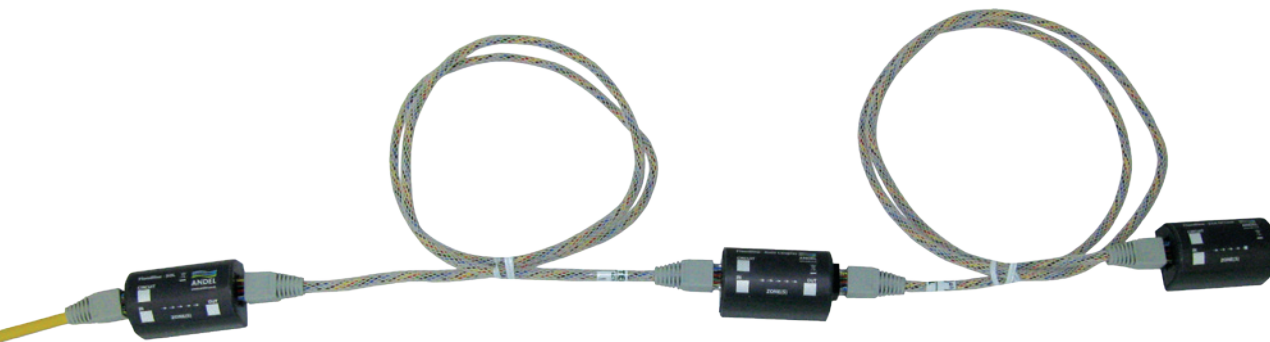

DS Plug and Play 06.20